

# PLATINUM MODEL REMOTE CONTROL - WIRELESS



Flashlight

**One Touch Lounge Preset Position**



**One Touch ZG Preset Position**

**One Touch TV Preset Position**

**Lift Tilt Headrest**

Press the UP arrows to lift and tilt the headrest section of the base.

**Head Lifts and Lowers**

Press and hold the UP and DOWN arrows to lift and lower the head section of the base.



**Foot Lifts and Lowers**

Press and hold the UP or DOWN arrow to lift and lower the foot section of the base.

**Memory Position Buttons**

Press M1 or M2 memory button to recall programmable preset positions.



**Lower Tilt Headrest**

Press the DOWN arrows to lower the tilt and headrest section of the base.

**One Touch Flat Preset Position**

**10, 20, 30 Minute Massage Timer Light**

Light indicates a 10, 20, or 30 minutes timer setting.



**One Touch Underbed LED Light - ON / OFF**

**Head Massage ON (3 intensities)**

Press button to turn ON the head massage. Cycles through 3 intensities.



**Foot Massage ON (3 intensities)**

Press button to turn ON the foot massage. Cycles through 3 intensities.

**Head and Foot Massage Timer / OFF**

Press button to select a 10, 20, or 30 minute setting. Pressing a fourth time will turn OFF the massage mode.



**Message Modes Select (5 modes)**

Press button to CHANGE the massage modes. Cycles through 5 intensities.

**One Touch Flashlight - ON / OFF**

Press and HOLD for the flashlight to stay on.

